DV-FILTER

DIGITAL GAUGE REPLACEMENT FILTER

Replacing Filter Step 1

Locate depressor and gasket inside sensor fitting. Note: digital gauge sensor models with o-ring instead of gasket do not use the DV-FILTER.



Step 2

Remove existing depressor and gasket with needle nose pliers.



Step 3

Remove soiled filter from depressor with o-ring tool. Insert new clean filter into depressor.



Step 4

Insert depressor with new filter and new gasket back inside sensor fitting (filter side in).



Step 5

Press firmly into place until depressor and gasket are securely seated.





⚠ WARNING: This product can expose you to chemicals including lead which are known to the State of California to cause cancer and birth defects or ofter reproductive harm. For more information go to www.P65Warnings.ca.gov

JB INDUSTRIES • 630.851.9444 • SALES@JBIND.COM